

DCR-VX1000/VX1000E

RMT-803

SONY®

SERVICE MANUAL

Ver 1.0 2001.07

US Model
Canadian Model
DCR-VX1000

AEP Model
UK Model
DCR-VX1000E

CORRECTION-2

Correct your service manual as shown below.


Correction of the switching position fine adjustment

(PV01-008)

SECTION 6. ADJUSTMENTS

3-4. Servo System Adjustments

 : Corrected portion.

Page	Incorrect	Correct
6-44	1-2. Switch Position Fine Adjustment Adjusting method: 1) Set data: 01 to page: 1, address: 00. 2) Set data: 03 to page: 3, address: 00, and press the PAUSE button of the adjusting remote commander.	1-2. Switch Position Fine Adjustment Adjusting method: 1) Set data: 01 to page: 1, address: 00. 2) Set data: 03 to page: 3, address: <u>01</u> , and press the PAUSE button of the adjusting remote commander. 

Revision History

Ver.	Date	History	Contents	S.M. Rev. issued
1.0	2001.07	Official Release	Correction of the switching position fine adjustment	—